
 


## Deactivating – Keyless Entry

boot lid has been opened and closed. The vehicle must be actively locked.

### Temporarily deactivating Keyless Access

The Keyless Access unlocking function can be deactivated temporarily so that the vehicle cannot be unlocked and started through misuse by unauthorised third parties.

1. Lock the vehicle with the  button on the vehicle key.
2. Touch the sensor on the outside of the door handle → Fig. 53  once within 5 seconds. Do not put your hand around the door handle when doing this.

Keyless Access is now temporarily deactivated.

3. To check deactivation, wait for at least 10 seconds and then pull the door handle again.

It should not be possible to open the door.

When the vehicle is next unlocked, it can be unlocked only using the vehicle key. The keyless locking and starting system Keyless Access is reactivated the next time the vehicle is unlocked.

### Permanently deactivating Keyless Access

Keyless Access can be permanently deactivated in the Infotainment system so that the vehicle cannot be unlocked and started due to misuse by unauthorised third parties.

