


Park Pilot

ReEquipación / Retrofit

1/2


- 1) Seleccionamos el **Modulo de Mando** : **19 - CAN- Gateway**
- 2) Seleccionamos **Installation List** : **01**
- 3) Seleccionamos y Activar **10 - PARK / STEER ASSIST** (IMAGEN)
- 4) Pulsar **Save Coding** (IMAGEN)

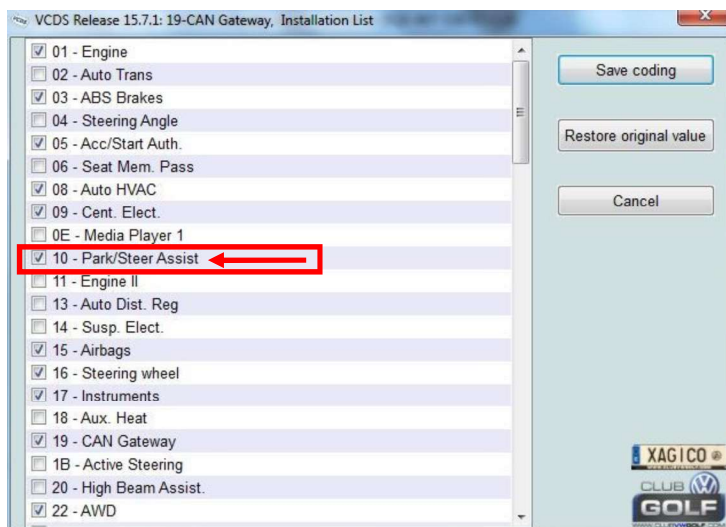


**VIDEO VW GOLF
PARK PILOT AND
PARK ASSIST**



- 5) Seleccionamos el **Modulo de Mando** : **19 - CAN - Gateway**
- 6) Seleccionamos **Security Access** : **16** Código Acceso **20103**
- 7) Seleccionamos **Adaptation** : **10**
- 8) Seleccionamos (IMAGEN)

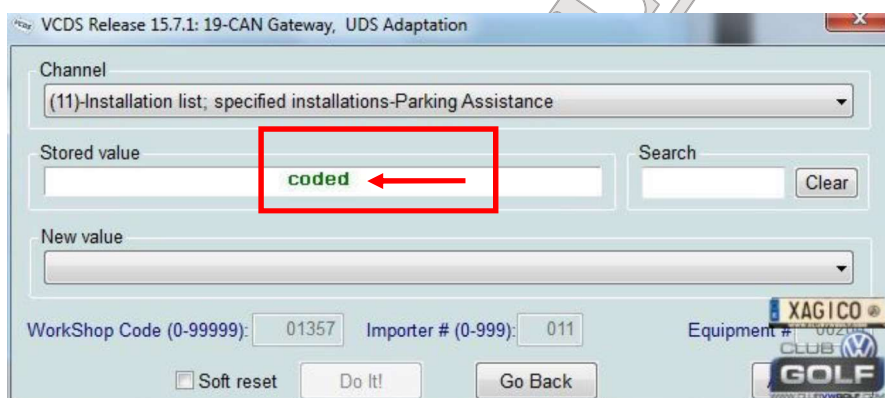

PDF PARK PILOT


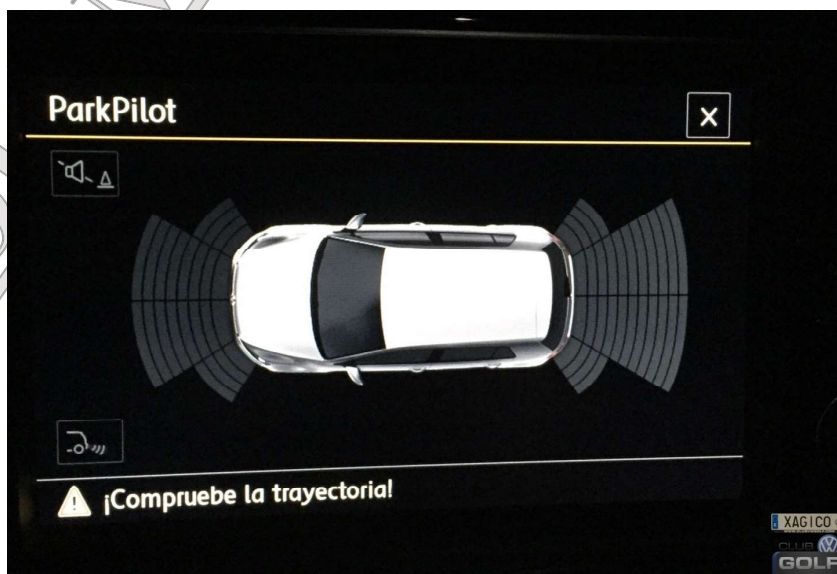


Park Pilot

ReEquipación / Retrofit


2/2

- 9) Seleccionamos el **Modulo de Mando : 5F - Information Electronic**
- 10) Seleccionamos **Security Access : 16** Código Acceso **20103 / 71679**
- 11) Seleccionamos **Adaptation : 10**
- 12) Seleccionamos (IMÁGENES)

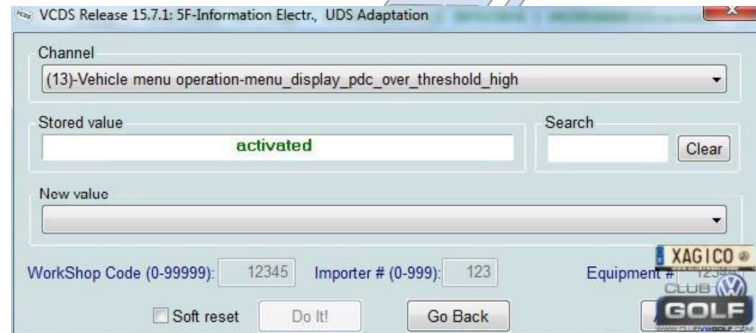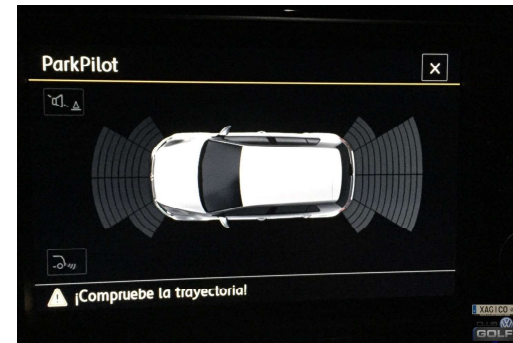

EJEMPLO AJUSTE GOLF XAGICO

AJUSTES MODULO 10 PARK PILOT

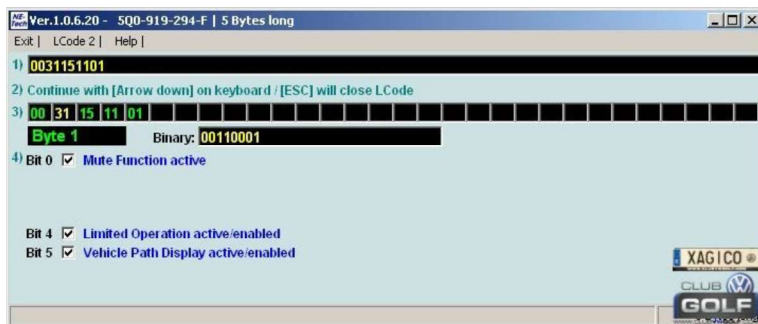

| Parámetro | Valor |
|---|---------|
| Audio reduction request | On |
| Deactivate production mode | 0 |
| Park assist activation tone | On |
| Speaker frequency for front park assist | Stage 6 |
| Speaker frequency for rear park assist | Stage 4 |
| Speaker volume for front park assist | Stage 4 |
| Speaker volume for rear park assist | Stage 6 |
| Switch-off speed for parking assist | 15 km/h |